

USER MANUAL



MINI DRY ICE MAKER

MODEL: 09403200

READ THIS MANUAL CAREFULLY BEFORE USING





TABLE OF CONTENTS

1. PREFACE	6
1.1 Introduction.....	6
1.2 General information.....	6
1.3 Warranty.....	6
1.4 Intended use.....	6
2. OPERATION.....	7
2.1 Operation Instructions	7
2.2 Replacing CO2 Cylinder.....	7
3. TROUBLESHOOTING	8
4. FEATURES	8
5. SPECIFICATIONS	9
6. STORAGE	9
7. DISCARDING.....	9

SAFETY INSTRUCTIONS

- This appliance may only be used for its designed purpose. Neither the manufacturer nor the supplier are liable for damage caused by the incorrect use of this item.
- This is a commercial product that should only be used by those who have read and fully understand this manual. It must not be used by children, or persons with reduced physical, sensory or mental capabilities without supervision.
- This device is intended for indoor use only.
- Keep the appliance and electrical plug away from water and other liquids. If either is exposed to a liquid, immediately disconnect the power supply and have the appliance checked by a certified technician. Not following these instructions may result in electric shock, or even death.
- Do not use the appliance after it has fallen or if it is damaged in any way. Have it checked and repaired by a certified technician.
- Do not move the appliance while in operation and never move or carry the appliance by the power cord.
- Do not place or move the appliance on its side, upside-down or while tilted.
- Do not open the casing or try to repair the appliance yourself, unless instructed to by a Maxima technician. This may void the warranty, cause damage to the machine or result in a hazardous situation.
- Do not use any devices or accessories that are not supplied with the appliance or designed to work with it.
- Never put your hands or other body parts near the moving parts of the appliance while operational and always keep an eye on the appliance when in use.
- Do not insert objects in the casing or openings of the appliance.



- Avoid overloading the appliance.
- Keep all packaging away from children and dispose of packaging in accordance with local and national regulations.
- The electrical installation must comply with local regulations.
- Switch off the appliance before removing the power plug.
- Always disconnect the power supply when the appliance is not in use. To remove the plug from the socket, always pull the plug itself and not the cable.
- Do not touch the power plug with damp or wet hands.
- Keep the power cable away from the range of operation and do not cover the cable. Make sure the power cable does not come in contact with hot or sharp objects and keep it away from open flames.
- Note that while the plug is in the electrical socket, the appliance is connected to the electrical grid.

SAFETY SYMBOLS



- Store product between 10-30°C
- Avoid placement in direct sunlight
- Product intended for indoor use
- Double electrical insulation: does not require grounding/earth connections
- Product disposal according to local waste regulations
- Product meets CE requirements

1. PREFACE

1.1 Introduction

Thank you for purchasing this product from Maxima. To ensure your own safety and to get the best out of your purchase, please read the instructions carefully before attempting to install or use this product. This manual should be available at all times and stored near the appliance.

All Maxima products are CE certified. Our products meet the legal requirements regarding health, safety and the environment, as set out by the European Commission. In addition, all products are thoroughly tested prior to shipment to ensure product quality and safety.

1.2 General information

For after sales support, please visit our Customer Service page at: www.maxima.com/en/service. User manuals are available online and can be downloaded electronically from the product's page on our website. If the manual for your product is not available, please contact Customer Service. For more information, visit our website: www.maxima.com

1.3 Warranty

We offer a 12-month warranty from the date of purchase, as indicated on your purchase invoice. Under the warranty, we will deliver additional spare parts in case of: material defects, manufacturing defects or other quality issues.

The following is not covered by the warranty:

- Damage relating to the incorrect use of the product
- Damage relating to use of parts that were not part of the original machine
- Damage due to transport to another location after delivery, or incorrect installation and connection
- Component damage caused by incorrect electrical or water connection
- Damage as a result of disassembly and/or modification to the original machine without permission
- Damage as a result of misuse, poor cleaning or improper maintenance
- Damage as a result of fire, building collapse, lightning, flooding, power surges or vermin
- Failure to read or follow the user manual
- Consumables and parts prone to wear and tear
- An altered invoice or no invoice

1.4 Intended use

This appliance may only be used for the purpose for which it was designed and intended. The manufacturer and supplier are not liable for any damage caused by incorrect operation and improper use.

This is a commercial product that must only be used by a trained professional who has read and understands this manual. It must not be used by children or persons with reduced capabilities without supervision.



2. OPERATION

2.1 Operation Instructions

⚠ This product works with liquid CO2 only, do not use other compressed gas cylinders with high pressure or non-liquid CO2. A liquid CO2 cylinder with siphon tube is recommended for effective delivery of liquid CO2. A non-liquid CO2 cylinder may be used if the tank is inverted (turned upside down). Install this product in a well-ventilated area to assist in venting excess CO2.

1 Do not use the dry ice machine when any part of it is wet

1. Place unit on level surface, that is a comfortable work height for operator

2. Place steel wire for connection hose around the CO2 tank

3. Add rubber seal rings to inside of connection hose nut, then connect to CO2 tank

4. Tighten using hands, then use a wrench to tighten it.

1 Do not overtighten

5. Plug unit into appropriate 120V 5-15 outlet.

6. Screw ice tube into the unit

7. Slowly open CO2 tank, ensuring no leaks in the system, then fully open CO2 tank

8. Press and release the red power button to turn the unit on

9. Press and release the blue operation button to start the dry ice production

1 Do not press the blue button without the ice tube fully engaged

10. After approximately 18 seconds, the dry ice will be formed in the ice tube

11. Using gloves, unscrew the ice tube and remove the dry ice from the tube using gravity

12. At business close, turn the unit off and close the CO2 tank

2.2 Replacing CO2 Cylinder

1. Close the shut-off valve of the CO2 cylinder

2. Press the blue operation button until all excess pressure is released

3. Loosen the nut on the CO2 cylinder and remove the CO2 cylinder

4. Replace with full CO2 cylinder

5. Place steel wire for connection hose around the CO2 tank

6. Add rubber seal rings to inside of connection hose nut, then connect to CO2 tank

7. Tighten using hands, then use a wrench to tighten it.

1 Do not overtighten


8. Slowly open CO2 tank, ensuring no leaks in the system, then fully open CO2 tank

9. Press the blue operation button to ensure functionality

3. TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE / SOLUTION
Not producing a full block of dry ice	Replace the CO2 tank with a full tank
Dry Ice is not dense or full	Replace the CO2 tank with a full tank
Not producing dry ice at all	Confirm unit is plugged in to appropriate outlet and breaker is not tripped

4. FEATURES

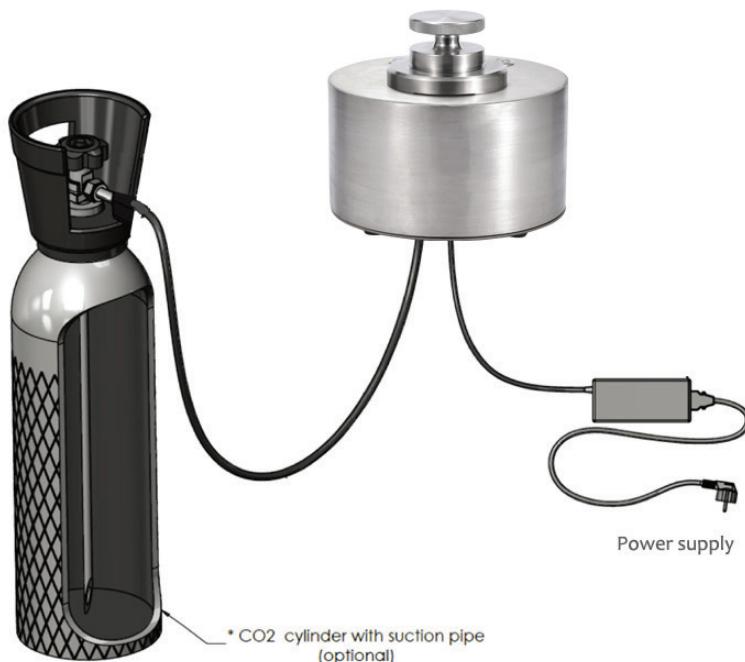

Power supply

* CO2 cylinder with suction pipe
(optional)

5. SPECIFICATIONS

MAXIMA DESKTOP GLASS CHILLER					
Article Code	Dimensions (cm)	Weight (kg)	Input	Electrical Power (W)	Capacity
09403200	W20 x D20 x H17	7,4	230V / 50Hz / 1Phase	21	1 block of dry ice in 18 seconds

6. STORAGE

Roll the power cable up and store it safely. Make sure the appliance is thoroughly cleaned before storing it away. Store in a cool, dry place.

7. DISCARDING


When disposing of this appliance, please do so in compliance with local and national regulations. It's also important to dispose of any related materials correctly. This piece of equipment may contain packaging and accessories that have to be collected and disposed of separately. These should not be treated as unsorted municipal waste.

Recycling: By disposing of waste in the proper manner, you help avoid hazards in the environment that could be caused by improper treatment of waste.

Packaging: The packaging is made from materials to be disposed of through local recycling facilities.

Batteries: If the machine contains a battery, these may contain toxic substances and are a hazard to the environment. Please dispose of used or rechargeable batteries responsibly through a local collection point.

Electronics: If this appliance contains electronic parts, please dispose of electrical waste at a recycling collection point for electronic equipment.

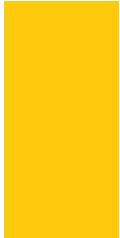

TECHNICAL DEPARTMENT & WAREHOUSE

NIJVERHEIDSWEG 23A/D - 3641 RP MIJDRECHT - THE NETHERLANDS

📞 +31 (0) 297 253 969

✉ TECHNICAL@MAXIMA.COM