



KITCHEN MASTER

ULTIMATE BLENDER

09379000

GEBRUIKSHANDLEIDING

USER MANUAL



**ALVORENS U DIT PRODUCT IN GEBRUIK GAAT NEMEN DIENT U EERST AANDACHTIG DEZE
GEBRUIKSHANDLEIDING DOOR TE LEZEN**

BEFORE USING THIS PRODUCT YOU SHOULD READ THIS USER MANUAL PROPERLY



Nederlands

Veiligheidsvoorschriften


- Het apparaat mag alleen worden gebruikt voor het doel waarvoor het werd ontworpen. De fabrikant aanvaardt geen enkele aansprakelijkheid voor schade als gevolg van onjuiste bediening en verkeerd gebruik.
- Onjuiste bediening en verkeerd gebruik van het apparaat kan ernstige schade aan het apparaat en verwonding van personen tot gevolg hebben.
- Zorg dat het apparaat en de stekker niet met water of een andere vloeistof in aanraking komen.
- Mocht het apparaat onverhoopt in het water vallen, trek dan onmiddellijk de stekker uit het stopcontact en laat het apparaat controleren door een erkend vakman. **Het niet navolgen van dit advies kan levergevaar opleveren.**
- Probeer nooit zelf de behuizing van het apparaat te openen. □ Steek geen voorwerpen in de behuizing van het apparaat □ Raak de stekker niet met natte of vochtige handen aan.
- Controleer stekker en snoer regelmatig op eventuele beschadiging. Indien stekker of snoer beschadigd is, laat de reparatie bij een erkend bedrijf uitvoeren.
- Gebruik het apparaat niet nadat het is gevallen of op andere wijze beschadigd is. Laat het bij een erkend reparatiebedrijf controleren en zo nodig repareren.
- Probeer het apparaat niet zelf te repareren. **Dit kan levensgevaar opleveren.**
- Zorg dat het snoer niet met scherpe of hete voorwerpen in aanraking komt en houdt het uit de buurt van open vuur. Als u de stekker uit het stopcontact wilt trekken, pak dan altijd de stekker zelf beet en trek nooit aan het snoer.
- Zorg dat niemand het snoer (of verlengsnoer) abusievelijk kan lostrekken of erover kan struikelen.
- Dit apparaat is uitsluitend bedoeld voor het bereiden van voedsel.
- Houdt het apparaat tijdens gebruik steeds in de gaten.
- Laat kinderen nooit zonder toezicht met huishoudelijke apparatuur werken.
- Trek altijd de stekker uit het stopcontact als het apparaat niet wordt gebruikt en telkens voordat het wordt schoongemaakt.
- **Gevaar!** Zo lang de stekker in het stopcontact zit, staat het apparaat onder netspanning.
- Schakel het apparaat uit voordat u de stekker uit het stopcontact trekt.
- Draag het apparaat nooit aan het snoer.
- Voorkom overbelasting.
- De elektrische aansluitingen moeten voldoen aan de hiervoor bestemde richtlijnen.

Vorbereiding voor eerste ingebruikname

- Controleer of het apparaat niet beschadigd is. Neem in geval van beschadiging onmiddellijk contact op met uw leverancier en gebruik het apparaat **NIET**.
- Verwijder al het verpakkingsmateriaal.
- Reinig het apparaat met handwarm water en een zachte doek.
- Plaats het apparaat waterpas.
- Plaats het apparaat zo, dat de stekker te allen tijde vrij en bereikbaar is.

Bediening

- Steek de stekker in de wandcontactdoos.
- Stroom aan/uit knop aan de achterkant.
- Plaats het voedsel in de beker en zet deze vast op het apparaat. Sluit het deksel stevig en zorg dat de beker juist op de beveiligingsschakelaar staat.
- **LET OP!** Als de beker niet op de beveiligingsschakelaar staat, werkt de blender niet. □ Hieronder kunt u het bedieningspaneel vinden:

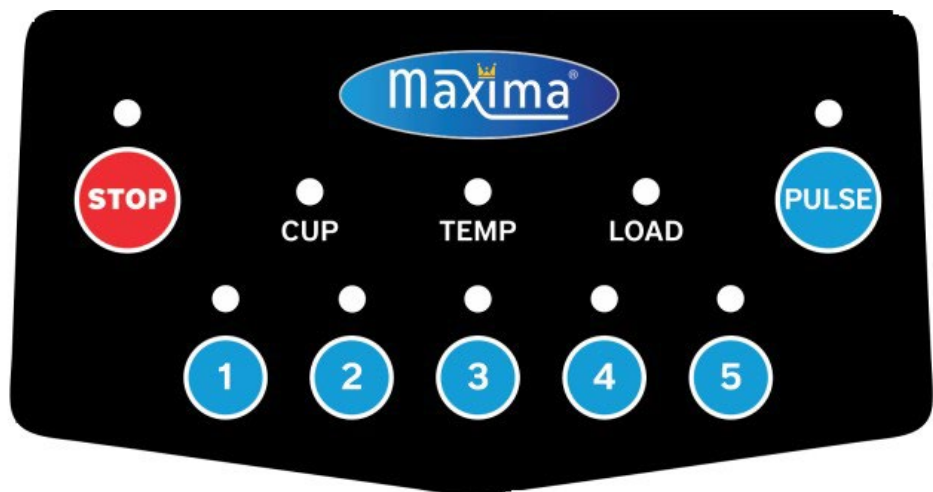

Stop: (Nood) stopknop om de machine te laten stoppen.

Pulse: werkt alleen zolang u de knop indrukt. Ondersteunt het programma door tijdelijk maximale snelheid te geven.

Cup: Als de beker niet juist is geplaatst en het deksel niet goed gesloten is zal dit lampje knipperen.

Temp: Als de interne temperatuur is overschreden zal dit lampje knipperen.

Load: Als de machine overbelast is zal dit lampje knipperen.

Advies: Wanneer u ijs wilt mixen, doe dit altijd met een vloeistof. Plaats eerst vloeistof in de kan en daarna het ijs erbovenop. Zet vervolgens de blender aan.

Mogelijke storingen

Onderstaand overzicht geef inzicht in mogelijke storingen. Bij twijfel neem dan contact op met de leverancier.

Probleem	Mogelijke oorzaak	Mogelijke oplossing
Motor werkt niet	Veiligheidsvergrendeling is niet ingeschakeld	Plaats de beker opnieuw
Motor is oververhit en ruikt vreemd	De motor is overbelast door de hoeveelheid voedsel of de motor heeft te lang gedraaid	Verminder de hoeveelheid voedsel en laat de motor afkoelen
Voedsel krijg niet de juiste dikte	Geen water toegevoegd of te weinig water toegevoegd	Voeg geleidelijk water toe tot het de juiste dikte heeft bereikt



Specificaties

- Meerdere programma's
- Pulseerfunctie
- RVS messenstel
- Thermisch beveiligd
- Beveiliging onder de beker
- Motorbeveiliging
- Voorzien van geluidswerende kap
- Stootvaste 1.5L beker
- Navulopening in het deksel
- 220V/50Hz/1Phase 1500 Watt

Opslag

- Rol het snoer op en stop het in de onderkant van het motorblok.
- Berg de machine op in een droge en koele plaats.

Garantie

Hartelijk bedankt dat u onze producten gebruikt. Ons bedrijf hanteert bepalingen zoals beschreven in onze "Algemene Voorwaarden", en geven u ondersteuning wanneer u een factuur kunt overleggen.

Wij verlenen 12 maanden garantie na aankoopdatum. In de garantieperiode is ons bedrijf verantwoordelijk voor onderdelen onder garantie in geval van materiaalfouten, fabricagefouten of kwaliteitsproblemen. Alleen bij correct gebruik en originele onderdelen.

De volgende zaken vallen niet onder de garantie:

1. Schade als gevolg van transport, installatie of verkeerde aansluitingen.
2. Component schade veroorzaakt door verkeerde elektrische- of water aansluiting.
3. Schade als gevolg van demontage of aanpassingen aan de originele machine, zonder toestemming.
4. Schade als gevolg van verkeerd gebruik, slechte reiniging of ondeskundig onderhoud.
5. Schade als gevolg van brand, instorting, blikseminslag, wateroverlast, spanningspieken, ongedierte en andere vergelijkbare gebeurtenissen.
6. Het niet lezen of volgen van de gebruikershandleiding.
7. Verbruiksonderdelen en aan slijtage onderhevige onderdelen.
8. Aangepaste factuur of geen factuur.

Afdanken

- Aan het einde van de levensduur, het apparaat afdanken volgens de op dat moment geldende voorschriften en richtlijnen.



English

Safety regulations


- Incorrect operation and improper use of the appliance can seriously damage the appliance and injure users.
- The appliance may only be used for the purpose for which it was intended and designed. The manufacturer is not liable for any damage caused by incorrect operation and improper use.
- Keep the appliance and electrical plug away from water and any other liquids. In the unlikely event that the appliance should fall into water, immediately pull the plug out of the socket and have the appliance checked by a certified technician. **Not following these instructions could give rise to life-threatening situations.**
- Never try to open the casing of the appliance yourself.
- Do not insert any objects in the casing of the appliance.
- Do not touch the plug with wet or damp hands.
- Regularly check the plug and cord for any damage. When the plug or cord is damaged, you should have it repaired by a certified repair company.
- Do not use the appliance after it has fallen or is damaged in any other way. Have it checked and repaired by a certified repair company.
- Do not try to repair the appliance yourself. **This could give rise to life-threatening situations.**
- Make sure the cord does not come in contact with sharp or hot objects and keep it away from open fire. To pull the plug out of the socket, always pull on the plug and not on the cord.
- Make sure that no one can accidentally pull the cord loose or trip over the cord.
- Always keep an eye on the appliance when in use.
- Never let children use home appliances without supervision.
- Always pull the plug out of the socket when the appliance is not being used and always before cleaning.
- **Warning!** As long as the plug is in the socket the appliance is connected to the power source.
- Turn off the appliance before pulling the plug out of the socket.
- Never carry the appliance by the cord.
- This appliance may only be used for blending food.
- Do not use any extra devices that are not supplied along with the appliance.
- Avoid overloading.
- Turn off the appliance after use by removing the plug from the socket.
- The electrical installation must satisfy the applicable national and local regulations.

Preparations before using for the first time

- Check to make sure the appliance is undamaged. In case of any damage, contact your supplier immediately and do **NOT** use the appliance.
- Remove all the packing material.
- Clean the appliance with lukewarm water and a soft cloth.
- Level the appliance.
- Position the appliance in such a way that the plug is accessible at all times.

Operation

- Plug the appliance into the main socket.
- Power on/off button on the back side of the machine.
- Place the food inside the container and place it on the base. Close the lid firmly. Make sure the safety mechanism on the bottom of the cup is pressed.
- **ATTENTION!** Without the safety switch being pressed, the blender will not function. □ Below you can find the control panel:

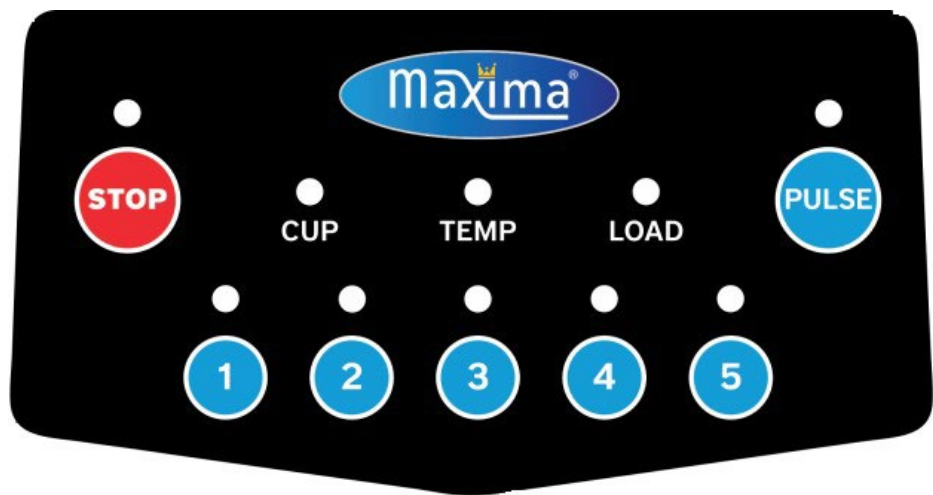

Stop: (Emergency) stop button to stop the machine.

Pulse: only works while you press the button. Supports the program by temporarily providing maximum speed.

Cup: When the jar is not placed correctly and lid is not closed properly, this light will flicker.

Temp: When the internal temperature is too high, this light will flicker.


Load: When motor load is too high, this light will flicker.

Advice: When mixing ice, always use a liquid. First place the liquid in the jar, then add the ice on top. Switch on the blender afterwards.

Problem	Reason	Possible Solution
Motor does not rotate	The magnetic safety interlock switch is not turned on	Replace the jar and tighten it
Motor is overheated or has a strange smell	The amount of processed food is too large or the use time is too long	Reduce the amount of food or let the motor cool down
The effect of making jam and bean paste is not ideal	No water added or too little water is added	Add water or increase the amount of water appropriately. (The amount of water added is subject to the water that can be immersed into the food)



Programs:

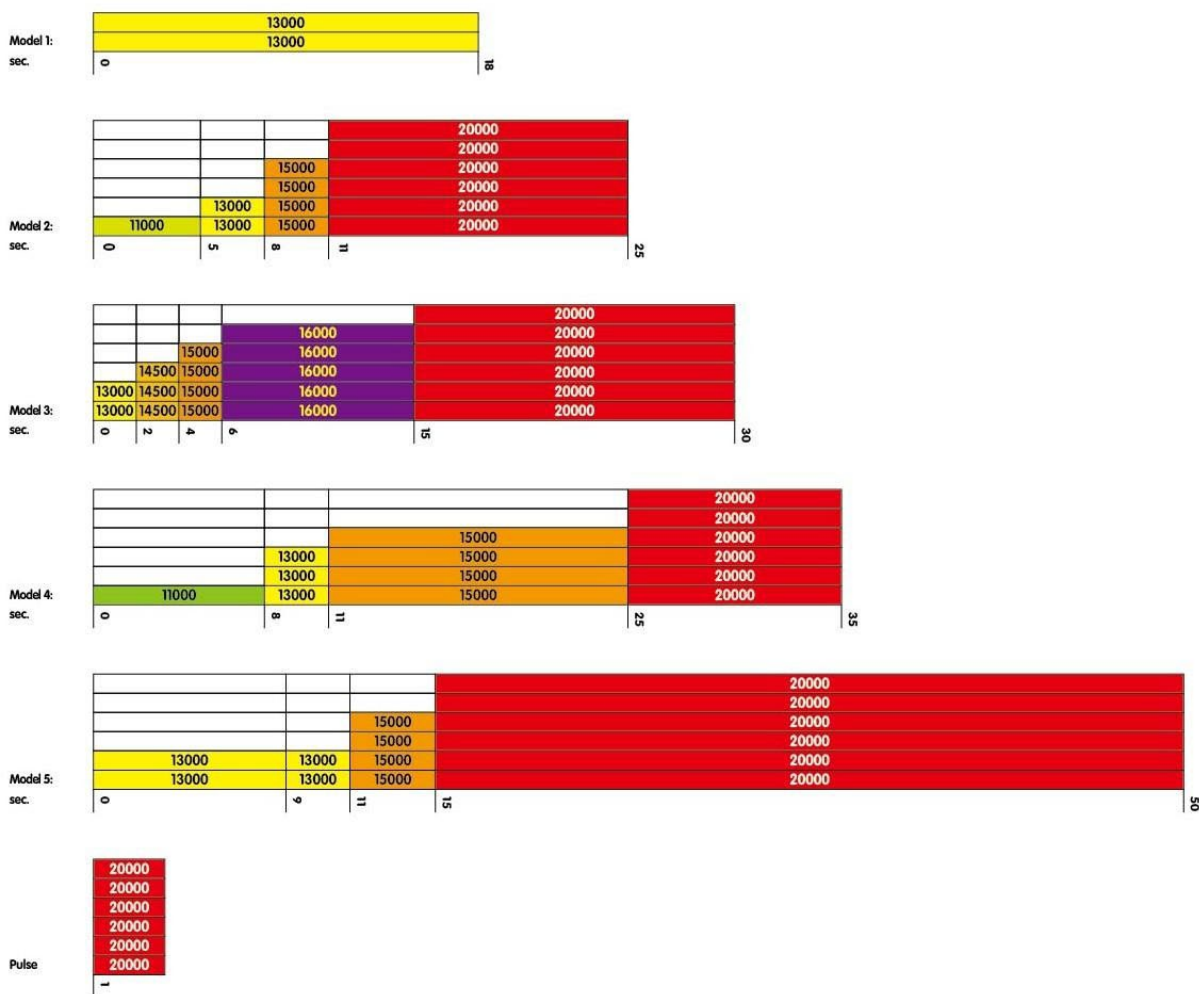

- **ATTENTION!** When the food has reached the desired thickness, turn of the appliance. Do not let the appliance run unnecessary, this can damage the appliance.
- Once the desired results have been reached, turn off the appliance by switching the Off button on the console.
- Should the appliance not be used for some time, please switch the machine off on the back side and please remove the plug from the main socket.

Cleaning and maintenance

- Always remove the plug from the socket before cleaning the appliance.
- **ATTENTION!** Never immerse the appliance in water or any other liquid!
- Clean the outside of the appliance with a damp cloth (water with mild detergent).
- Never use aggressive cleaning agents or abrasives. Do not use any sharp or pointed objects. Do not use petrol or solvents! Clean with a damp cloth and detergent if necessary. Do not use abrasive materials.
- To clean the container, pour water and a commercially-available detergent into the container, place the cover and cap on the container and run the appliance for 10-30 seconds at maximum speed. You can replicate this process to get a better result. Then switch of the appliance, remove the container from the base, empty and rinse with clean water. Invert the container and allow it to drip dry, or dry with a soft cloth.
- **ATTENTION!** Make sure the bottom of the container stays dry at all times!



Technical details

- Variable speed
- Stainless steel knives
- Protection against overheating
- Safety switch on the motor base
- Motor overload safety
- Pulse function
- Complete with sound cover
- 1.5L polycarbonate jar
- Opening in the lid
- 220V/50Hz/1Phase 1500 Watt

Storage

- Coil the power cord around the cord storage at the bottom of motor base.
- Store in a cool and dry place.

Guarantee

Thank you for using our products, our company will follow related provisions from our "Algemene Voorwaarden", and provide you services when you can show us the invoice.

We provide 12-month warranty from the date of purchase (invoice date). In the warranty period, our company is responsible for free parts if there is a device fault or quality problem of spare parts under correct operation.

The following does not belong to free services:

1. Damages result from transportation, installation, improper connections.
2. Component damages caused by failing to provide power and voltage as required in technical data.
3. Damages caused by disassembling products, adjust or change the mechanical and electrical structures without permission.
4. Damages caused by improper operation, cleaning and maintenance.
5. Non-man-made damage, such as damages from abnormal voltage, fire, building collapse, lightning, floods and other natural disasters, and damages from rats and other pests.
6. Failure in following the manual when operating.
7. Wearable and expendable parts.
8. Altered invoice or without invoice.

Discarding

- When discarding the appliance at the end of its useful life, please observe the regulations and guidelines in force at that time.